

Gigabit Ethernet PCI Express Adapter

EN-9260TX-E User Manual

Version 1.0 / 1, 2009



FCC Certifications



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

CE Mark Warning



This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class B for ITE, the essential protection requirement of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Edimax has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check for the latest information at www.edimax.com. No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

All trade names and trademarks are the properties of their respective companies.

Copyright © 2009. All Rights Reserved.

Table of Contents

1. UNPACKING INFORMATION	3
2. OVERVIEW	3
2.1 INTRODUCTION.....	3
2.2 KEY FEATURES	4
2.3 LED INDICATORS.....	4
3. INSTALLING THE PCI EXPRESS GIGABIT ETHERNET ADAPTER	3
3.1 SYSTEM REQUIREMENTS	5
3.2 HARDWARE INSTALLATION	5
3.3 DRIVER INSTALLATION	6
4. PRODUCT SPECIFICATIONS	11

1. Unpacking Information

Thank you for purchasing the EN-9260TX-E PCI Express Gigabit Ethernet Adapter. Before you start, please verify that your package contains the following items:

1. One EN-9260TX-E PCI Express Gigabit Ethernet Adapter.
2. One Driver/ Manual CD-ROM

2. Overview

2.1 Introduction

The EN-9260TX-E PCI Express Gigabit Ethernet Adapter is a high performance Gigabit Ethernet adapter designed for PCI Express Bus, which has better performance than the current PCI interface.

Supporting connection speeds of up to 1000 Mbps, it boosts your networking throughput easily. The EN-9260TX-E allows users to transfer high-bandwidth needed files faster and hence get a real efficiency improvement.

The EN-9260TX-E also supports NWay auto-negotiation that detects the networking speeds (10/100/1000 Mbps) and the duplex modes (full/half) automatically. Auto MDI/MDI-X is also supported to alleviate the effort choosing crossover cables.

2.2 Key Features

- Compliant with PCI Express 1.0a - x1 PCI Express standard
- Compliant with CSMA/CD protocol
- Supports 10/100/1000 Mbps and Full/Half-Duplex auto negotiation
- Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab
- Supports Full Duplex flow control (IEEE 802.3x)
- Supports Auto MDI/ MDI-X auto crossover.
- Wake On LAN and ACPI Power Management, compliant to ACPI 2.0
- Integrated 128KB Frame Buffer Memory
- Supports Windows 98SE/2000/XP/Vista, MSC 10.4x, and Linux OS
- CE FCC, VCCI class B approved

2.3 LED Indicators

10M	Green	This adapter is connected at 10 Mbps
	Blinking Green	Data transmitting/ receiving at 10 Mbps
100M	Green	This adapter is connected at 100 Mbps
	Blinking Green	Data transmitting/ receiving at 100 Mbps
1000M	Green	This adapter is connected at 1000 Mbps
	Blinking Green	Data transmitting/ receiving at 1000 Mbps

3. Installing the PCI Express Gigabit Ethernet Adapter

3.1 System Requirements

- One available PCI Express slot
- Microsoft Windows 98SE/2000/XP/MAC 10.4x/Linux based computer.
- A CD-ROM Drive

3.2 Hardware Installation

Caution:

Before installing this adapter, please touch the metal case of your computer to discharge any static electricity from your body. We recommend users to install this adapter wearing a wrist strap attached to the PC chassis.

1. Turn off the computer.
2. Remove the computer's cover in accordance to its manual.
3. Insert the contact edge of the adapter card into the connector of an available PCI Express slot. Press the card firmly into the connector. Please make sure that the card's contacts are fully seated in the PCI slot.
4. Install the bracket screw that secures the card to the computer chassis.
5. Replace the computer's cover.
6. Connect the network cable to the RJ-45 network connector.
7. Turn on the computer.

Note: You may select the networking cable according to the following information:

10 BASE-T:	Category 3,4 or 5 UTP/STP
100 BASE-TX:	Category 5 UTP/STP
1000 BASE-T:	Category 5, 5e UTP/STP

3.3 Driver Installation

After mounting this adapter to your computer, you have to install a driver to activate this adapter. The following instruction uses Windows XP as the presumed operation system. The screens upon installation differ slightly from each operation system but the procedures are familiar. Please refer to the following for instructions.


1. Turn your computer on after plugging the EN-9260TX-E to a PCI-E slot. When the “Found New Hardware Wizard” pops up, click the “Cancel” button to close the window.
2. Insert the Driver CD into your CD ROM drive. The Setup Wizard will run automatically and display the following screen. Select EN-9260TX-E by clicking on its product icon.




3. On the following screens, choose Setup Driver and select your operating system.




4. When the Welcome window pops up. Click the “Next” button to start driver installation.

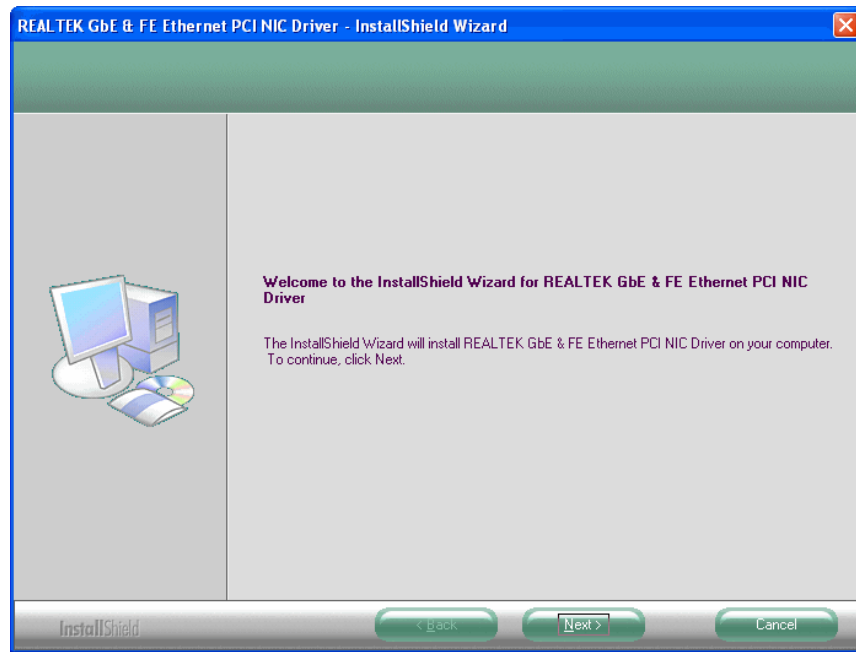


5. On the following screen, click Install.

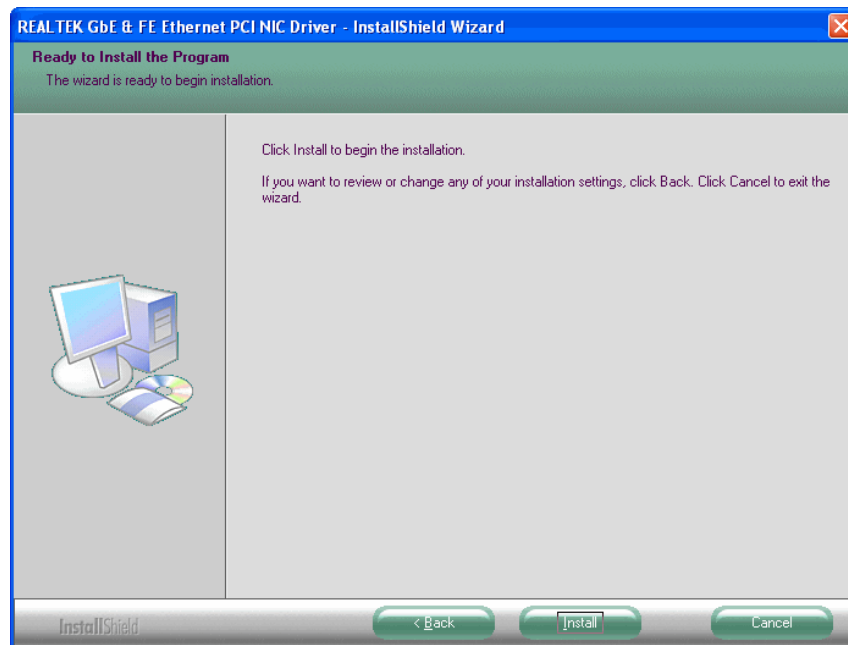

6. Please wait while driver is being installed.

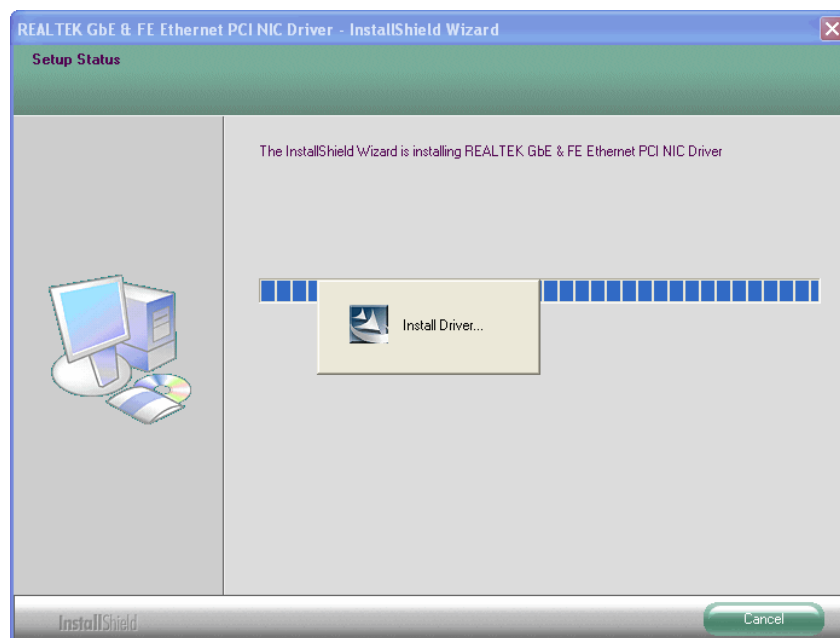


7. Click the “Finish” button to complete driver installation.

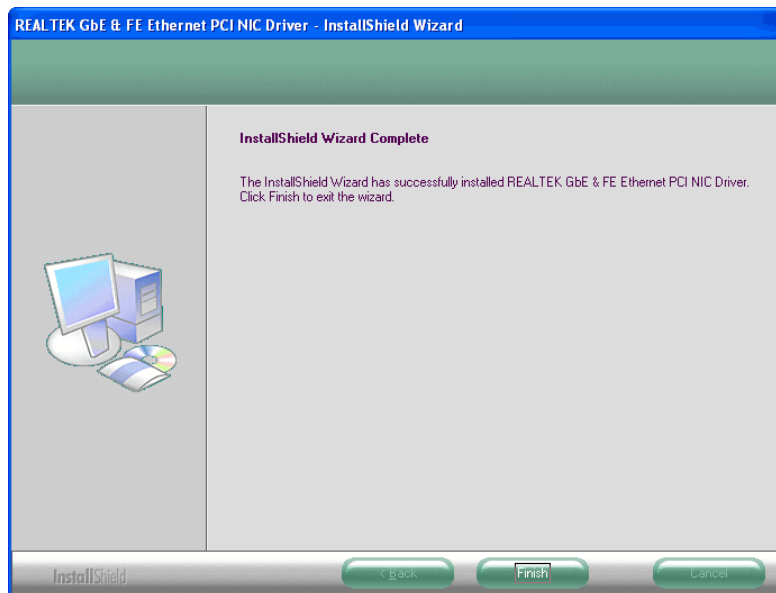

Note:

Driver installation details for MAC OS and Linux are in their respective folders. Please use your File Manager to locate and browse the CD contents for instructions.

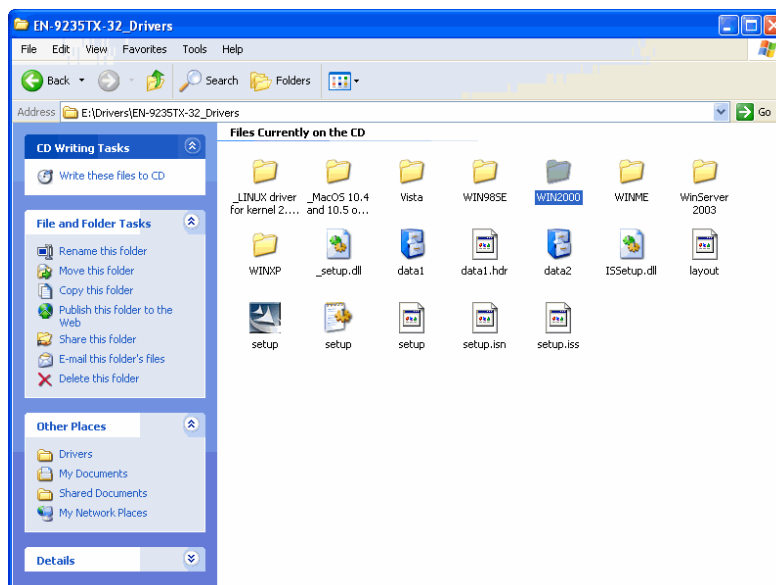

4. Product Specifications

Standards	IEEE802.3, 10BASE-T IEEE802.3u, 100BASE-TX IEEE802.3ab, 1000BASE-T IEEE802.3x Flow control
Interface	PCI Express serial link x 1 10/100/1000Mbps Gigabit Ethernet Port x 1
Cable Connections	UTP Category 3,4,5,5e
Network Data Rates	1000Mbps, 100Mbps, 10Mbps
LED Indicators	10M (Link/ACT) x 1 100M (Link/ACT) x 1 1000M (Link/ACT) x 1
Operating Temperature	0 ⁰ ~ 40 ⁰ C (32 ⁰ ~ 104 ⁰ F)
Operating Humidity	10% - 90% non-condensing
Operation System	Windows 2000/X64/XP/Vista
Safety Approval	CE, FCC, VCCI Class B



EDIMAX Technology Co., Ltd.
www.edimax.com